

## Operating instructions for Band Clamp BAN700



### Dear Customer,

Congratulations on purchasing your BESSEY Band Clamp BAN700 which is enhanced by the BESSEY Vario Angles BVE.

Because they are complementary to each other, we have only issued one product leaflet to cover both articles. This will introduce to you the application, using and working techniques and an indication of other products. Good luck with your BESSEY clamps.

### Working Parts:


- the **strap** which stretches in the direction of the arrow
- the **crank** to apply tension and roll up the strap in the direction of the arrow
- the **handle**, ergonomically designed for powerful clamping which will release the handle by turning the spindle.

The strap locks automatically during clamping and can be removed when the tension is released. The cranking handle can be fixed on either side of the band housing using the attached screw which can be tightened either right or left and has a recessed head. The **BESSEY Vario Angles** follow the line of edges and curves. They adapt to all angles or curves and can easily be applied and removed.

### BESSEY Vario Angles BVE

Appropriate for **all** band clamps with a **textile** strap up to 25 mm wide x 1 mm thick.

## BAN700 Bandspanner | Band Clamp Presse à ruban | Tensor de cinta Strettoio a nastro | Båndspænder

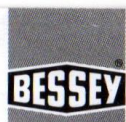

Einfach besser.



Hinweise für Gebrauch, Sicherheit und Anwendung.  
Hints for use, safety and application.  
Indications pour l'utilisation et la sécurité.  
Indicaciones para el uso, la seguridad y la aplicación.  
Istruzioni per l'uso e avvertenze.  
Aanwijzingen voor het gebruik, veiligheidsaanbevelingen.  
Oplysninger om anvendelse og sikkerhed.

### To fit a new strap:

- Release the fixing screw with the recessed head, and remove the cover of the housing.
- Then all parts of the strap can easily be removed.
- Insert the new strap at the bottom of the housing.
- Hang the end of the strap at the core. Firmly screw down the housing cover.

### Technical Specification:

**Strap:** Polyester with tensile strength minimum 5000 N, 25 mm wide x 1 mm in diameter, clamping capacity 7000 mm, band fixing on each side 60 mm.

**Vario Angles:** will swivel at any angle between 60° and 180°.

All parts of the housing are made of polyamid with 25 % fibers.

### Warning – When using the BESSEY Band Clamp and BESSEY Vario Angles:

Do not use the clamp for lifting, pulling, carrying and do not use on any living creature. Do not use any other device or extension for tightening the clamp. Misuse of the clamp or the angles can cause personal injury or damage to property. Only use BESSEY original spare parts. Always replace a damaged strap with a new strap. Do not use in a temperature higher than 60 °C (140 °F).

No claim under contract or product liability will be admitted for injury or damage if the warnings and instructions have not been properly complied with!